



Silky Underwear

BergaMuls ET1 as sensory enhancer

Distributed by:



Global Ingredient Solutions


CustomerService@ingsolutions.com

Phone: (949) 336 - 6275

www.globalingredientsolutions.com

Claims

- Moisture absorbing
- Smooth, powdery almost gliding skin feel

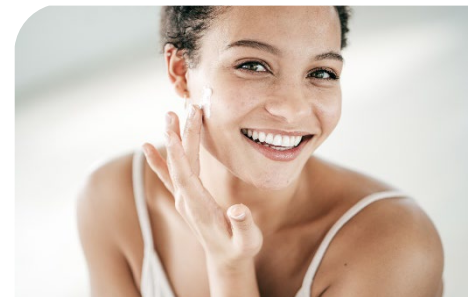

Phase	Product	INCI	Supplier	% (w/w)
A	Demin. Water	Aqua	-	Up to 100
	Cosphaderm® Pentiol Natural	Pentylene Glycol	Cosphatec	5.00
B	BergaCare FG M12	Coco Caprylate / Caprate, Dodecane, Citrullus Lanatus Seed Oil	Berg+Schmidt	8.00
	BergaCare GS 40	Glyceryl Stearate	Berg+Schmidt	3.00
	Cosphaderm® T-70 non GMO Eco	Tocopherol, Helianthus Annuus (Sunflower) Seed Oil	Cosphatec	0.50
B1	BergaCare SB	Butyrospermum Parkii (Shea) Butter	Berg+Schmidt	9.00
	BergaMuls ET1	Beta-Glucan, Pectin	Berg+Schmidt	3.00
C	Sodium Hydroxide (25% aq.)	Aqua, Sodium Hydroxide	-	Adjust pH
D	Extrapone Marigold	Aqua, Propylene Glycol, Calendula Officinalis Flower Extract, Glucose	Symrise	1.00

pH = 5.3

Viscosity (24 h, Brookfield, 20 rpm) = 9800 mPas

Internal Ref.: Ach-010-BSC

Stability: Stable for 3 months at 20°C, 40°C

Manufacturing Procedure

1. Combine phase A and heat up to 75 °C.
2. Combine all raw materials of phase B and heat up to 75 °C until homogenous.
3. Add BergaCare SB to phase B, wait until it is molten, then add BergaMuls ET1 and disperse.
4. Add phase B/B1 to A while stirring and homogenize for 30 seconds at 7000 rpm.
5. Cool down to below 40 °C, adjust pH and add phase D.

Berg+Schmidt Care Ingredients

Telefon: +49 40 284 039-11
careingredients@berg-schmidt.com
www.solutions.berg-schmidt.com

Disclaimer: All information, technical advice and all guideline formulations shown are based on our best knowledge and are for information purpose only.

Berg+Schmidt
Care Ingredients